



Fab Underground: 3D Post Processing Safety Policies

Wear nitrile gloves for resin parts.



Wear safety glasses.



Wait for print to cool down before handling.




Secure part in a vise or clamp before drilling, do not hold in hands!



Always cut away from your body.




DO NOT use Exacto knives to remove supports.

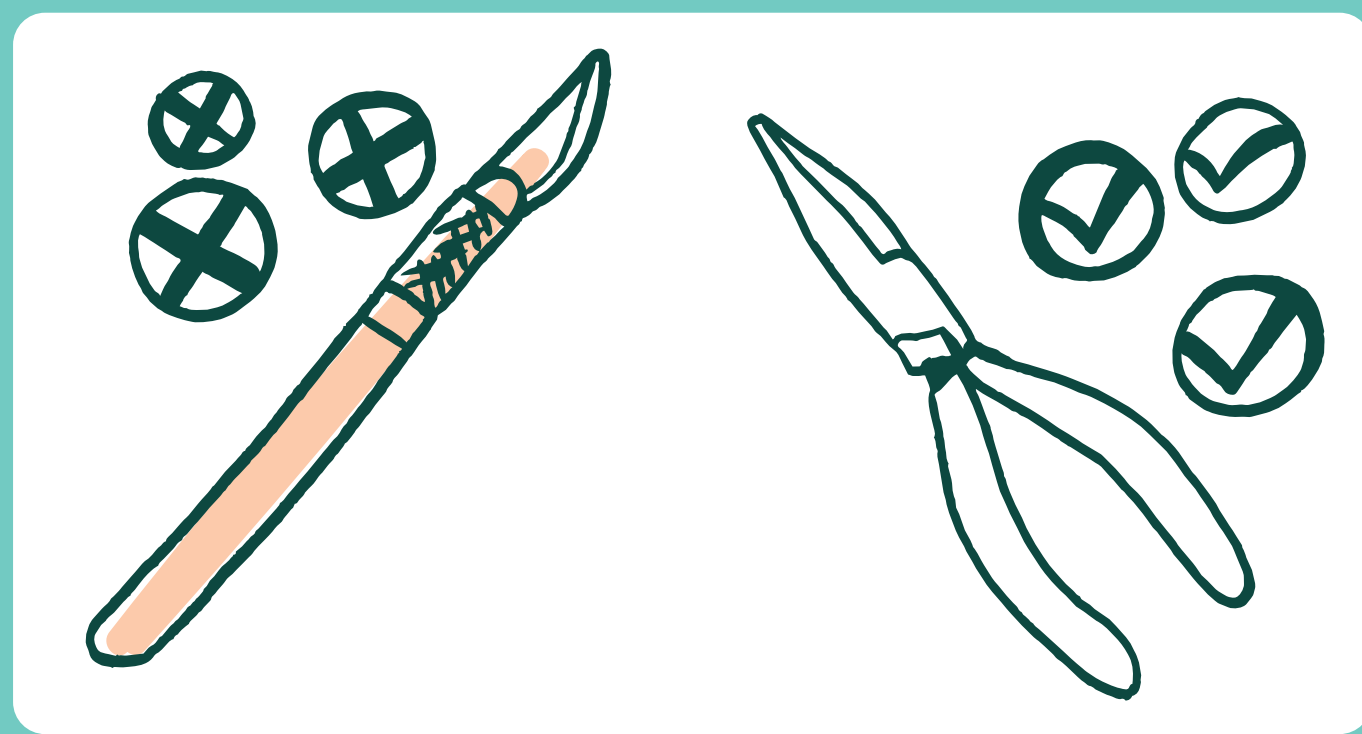

When sanding wear a mask to avoid inhaling microplastics.



Clean up space when finished.

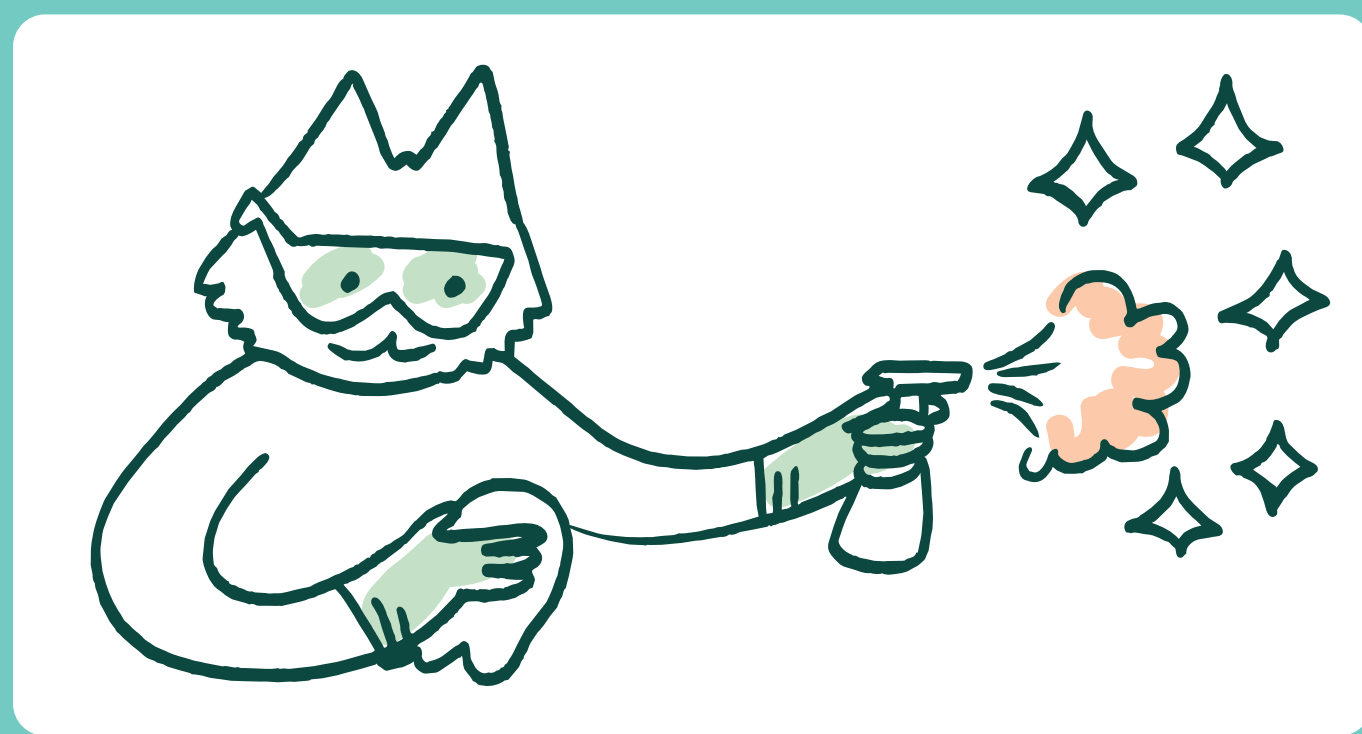

Thanks for coming to the lab!